# **MBDF345-40**

## Indoor Multi-band TV terrestrial amplifier

#### Installation and safety instructions



- Do not use this product for uses that are different from those for which it has been designed.
- The product must not come into contact with water or be wetted by liquids.
- Do not touch the appliance with wet or humid parts of the body.
- To avoid the risk of fire or electrocution, do not expose the product to rain or moisture.
- To avoid the risk of fire do not using the product in the presence of inflammable substances and vapours, such as alcohol, insecticides, petrol, ect..
- When installing in a cabinet or recessed compartment, provide adequate ventilation.
- Do not use the product at environmental temperatures more than 55°C.

## Description of symbols and electrical safety



Product complies with CE marking requirements.



Symbol indicating earth terminal.



Installation is only permitted in dry rooms and on a non-flammable surface. Ensure that there is adequate air circulation.



Risk of fire or electrocution.

## **Connection and activation**

- 1 Connect the coaxial inputs to the antennas in the system.
- 2 Set the gain adjusters of any unused inputs to maximum attenuation or close the inputs with 75Ω loads.
- 3 If the UHF input is connected to a device that require remote power, operate the corresponding voltage 0/12V selector.
- 4 Connect the power cord to the mains socket.
- 5 Check that the amplifier is correctly switched on, indicated by the green Power LED lighting up.
- 6 Connect the coaxial output of the switchboard to a field meter and using the inputs gain adjusters, balance the signals received from different inputs.
- 7 Disconnect the mains socket first and connect the amplifier coaxial output to MATV network and then reconnect the power cord to the mains.

### Inputs remote power error

If the **POWER LED** is in steady red or flashing green, it indicates the presence of a short circuit or overload on at least one antenna connection. To restore correct operation, switch off the remote power supply and remove the short circuit or the cause of the overload.

- Prepare the connection to the power supply in accordance with the regulations in force in the country of installation and in such a way that it can be easily disconnected.
- The product can be connected to the supply mains only if the voltage and the frequency of the supply mains correspond to those indicated on the data table.
- In the event of a fault, do not attempt to repair the product as this will invalidate the warranty.
- Immediately contact a qualified person (authorised dealel or the manufacturer) if the product is dropped or knocked to check its correct functioning.
- After removing the product from its packaging ensure that it is complete and undamaged; if in doubt, contact (authorised dealer or manufacturer) immediately.




RoHS 2011/65EU compliant product.




The product at the end of its life must be collected separately from other waste in order to allow for proper treatment and recycling.



Symbol meaning that the integrated mains power supply complies with the safety requirements for class II devices.

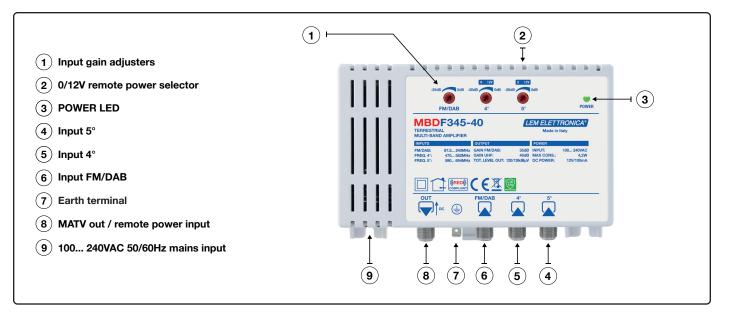

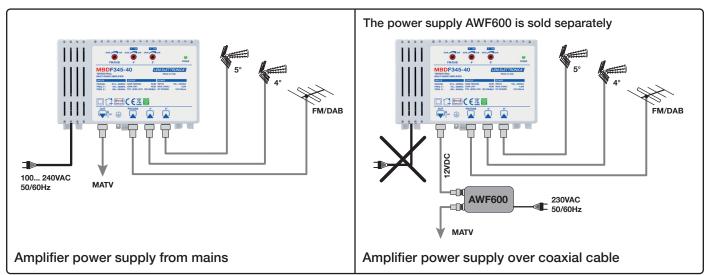

	MBDF345-40
	3
	FM/DAB - 4° - 5°
MHz	87.5 240
MHz	470 xxx
MHz	xxx 694
	LTE 700 (4G+5G)
dB	35 (Adjustable 025)
dB	40 (Adjustable 020)
dB	40 (Adjustable 020)
dBµV	120
dBµV	126
dB	7
dB	>12
	12V/ 100mA
	100 240VAC 50/60Hz
W	3
W	4,2
°C	-15 +55
mm	135 x 91 x 45
	MHz MHz dB dB dB dB W dB W dB W w W

### LEM ELETTRONICA srl

Via Grezze, 38 - 25015 Desenzano d/G Italy Tel. +39 0309120006 info@lemelettronica.it

