
## SF4T



#### FIBRE OPTIC VIRTUAL QUATTRO LNB

- Virtual LNB Quattro emulation
- 1 output for TV Terrestrial / DAB / FM
- Optical link monitor Led
- A.G.C. for each output
- Level adjuster for TV terrestrial signal

Optical receiver of a single satellite and terrestrial feed (TV/FM/DAB). The satellite outputs emulate Quattro LNB outputs.

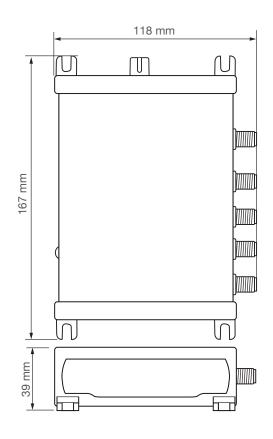

# Ready for **UHDTV**





MODEL		SF4T		
OPTICAL INPUT	n°	1		
SATELLITE OUTPUTS	n°	4		
TERRESTRIAL OUTPUT	n°	1		
OPTICAL				
OPERATION WAVELENGTH	nm	1310 - 1330 - 1550		
INPUT POWER RANGE	dBm	-14 0		
INPUT CONNECTOR TYPE		SC/APC		
RETURN LOSS	dB	≥40		
SATELLITE				
OUTPUT BANDWIDTH	MHz	1xVL-HL (950 1.950)/ VH-HH (1.100 2.150)		
OUTPUT LEVEL	dΒμV	80		
TV TERRESTRIAL / FM / DAB				
OUTPUT BANDWIDTH	MHz	80 862		
LEVEL ADJUSTER ATTENUATOR	dB	020		
OUTPUT LEVEL	dΒμV	70 90 (adjustable)		
OTHERS				
ISOLATION V / H	dB	> 30		
OUTPUT RETURN LOSS	dB	> 12		
DC INPUT VOLTAGE RANGE	V	12 20		
MAXIMUM CONSUMPTION	W	8		
OPERATING TEMPERATURE	°C	0 50		
DIMENSIONS	mm	172x118x38		

DESCRIPTION OF SYMBOLS AND ELECTRICAL SAFETY					
CE	The equipment complies with the CE requirements				
	The equipment is designed for indoor use only				
	Equipment grounding terminal				
	This symbol indicates that the equipment complies with the class II equipment safety requirements				
ZZ CAUTION !	To avoid the risk of electric shock, do not open the equipment.				
RoHS 2002 95 EC	The equipment is compliant with RoHS 2011/65EU				
	Dispose according to local authorities recycling processes				

## **Safety instructions**


- 1. Read carefully these instructions
- 2. Keep these instructions
- 3. Heed all warnings
- 4. Follow all instructions
- 5. Do not expose this apparatus to extreme temperatures
- 6. Do not install this apparatus near water or expose to rain and moisture
- 7. Place the apparatus in a dry and well-aired location
- 8. Install the unit on a vertical wall, or in a waterproof cabinet with a minimum IP55 rating, and fix it safely using the provided fixing plugs
- 9. Do not install the unit lying flat or on its top
- 10. Connect the power adapter cord to a detachable power supply socket
- 11. Unplug the apparatus during lighting storms or when unused for long time
- 12. Only use accessories specified by the manufacturer
- 13. Do not remove the cover without disconnecting from the mains first
- 14. Ambient temperature should not be lower than 0°C and higher than 45°C
- 15. Please allow air circulation around the apparatus



## **Installation warnings**


Place the apparatus and the power supplier in a dry and well-aired location
Install the unit on a vertical wall, or in a waterproof cabinet with a minimum IP55
rating, and fix it safely using the provided fixing plugs
Use only the power supplier provided with the amplifier.
The use of not-original power suppliers determines the not-compliance of the product and can cause malfunctions and void the warranty

## Recommended distance

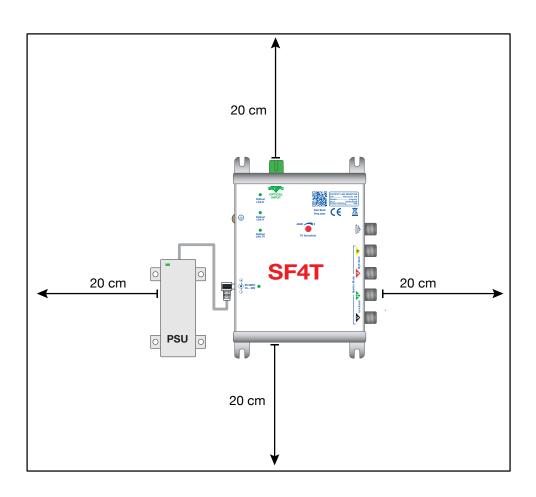

### **DESCRIPTION SF4T**

- (1) SC/APC Optical Input
- (2) Terrestrial output level adjuster
- (3) Terrestre Output
- (4) LNB QUATTRO (VL-HL-HL-HH) Outputs
- 5 Power DC input 12... 20 Volt
- 6 Gound bonding
- (7) Optical link led's

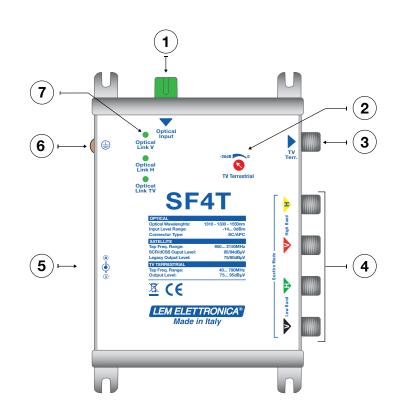




Optical signals higher than 0dBm can damage the **FCO-IF-T** in PON with less than 4 optical points add at least a 7dBm optical attenuator.

#### **MONITOR LED**

DC Input Optical Link

Off= No power Off= No optical link
Green= Power Green= Optical link

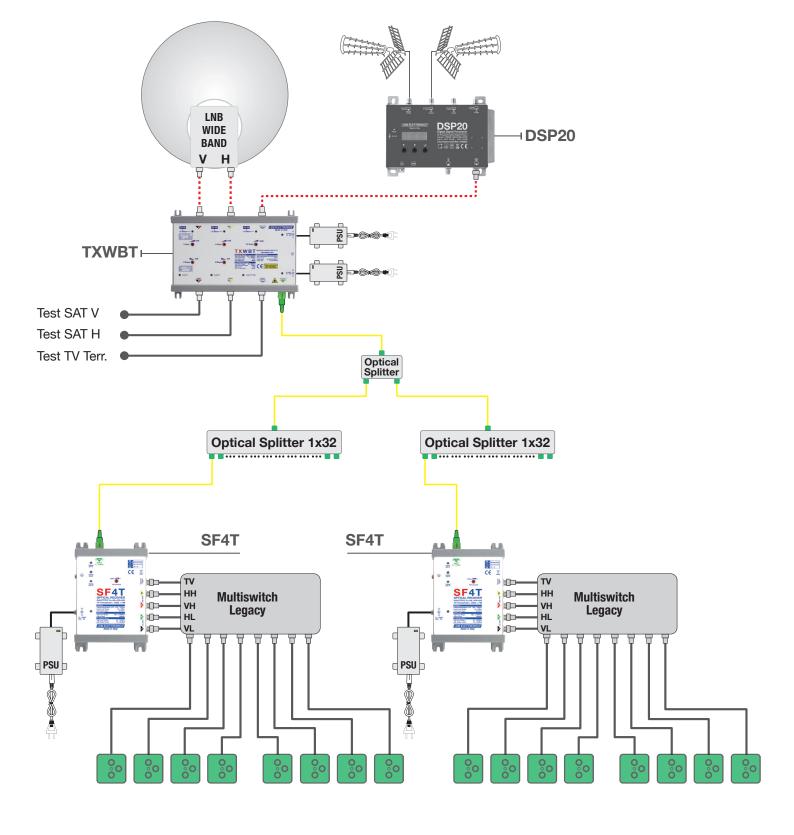

## Distribution of one satellite and terrestrial feed (DTT; FM; DAB) over a single-mode optical fibre to standard five wire multiswitch

The headend **TXWBT** converts and transmits over a single-mode fibre optical cable the terrestrial feeds and the transponders of a satellite received from a Wide Band LNB. The optical signals are received by the optical converter **SF4T** that emulates an LNB Quattro. The outputs VL-HL/VH-HH and the terrestrial output can feed any five input multiswitch.

